


HOBO® RH Sensor Cap Replacement Kit (HUM-RHCAP2)

For use with U23-002, S-THB-M002, S-THB-M008, ZW-003, ZW-005, and ZW-007


Contents

- Five RH sensor caps with integrated protective membrane
- Five pieces of white adhesive tape

Step 1: Install Cap. To replace the RH Sensor Cap, remove the existing white tape and RH cap from cable. Using a slight twisting motion, push the replacement cap in until it hits the shoulder of the cable end.

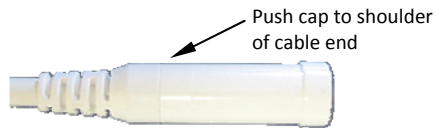

Step 2: Apply Tape. Wrap a piece of white tape (supplied) over the seam between the cable and RH cap. Line up the left edge of the tape where the cable begins to taper down as shown in below.

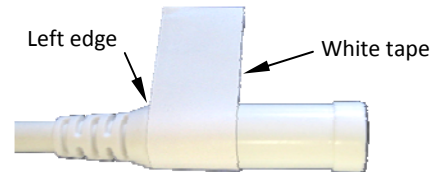

Cable with new RH Sensor Cap installed and taped



11477-C MAN-RHCAP2

Distributed by MicroDAQ.com, Ltd.

www.MicroDAQ.com

(603) 746-5524