

CR2032 Battery replacement

© Copyright LogTag Recorders, 2019

1.0 Prepare the recorder

Procedure:-

- 1.1 Download the unit to save any recorded data.
- 1.2 Hibernate the unit using LogTag Analyzer.

Failing to hibernate the recorder may result in serious memory corruption. As a result, you may no longer be able to use this product.

2.0 Remove old battery

Procedure:-


- 2.1 Carefully remove the rear label covering the battery door using a small-bladed screwdriver or knife.



- 2.2 Use a coin to turn the battery door anti-clockwise; remove it from case.



- 2.3 Remove the battery using a small-bladed screwdriver, as shown.

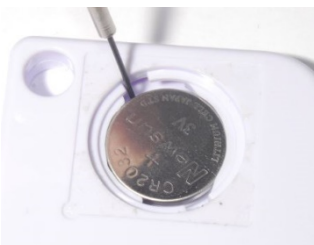

3.0 Insert new battery

Only use batteries from a reputable manufacturer!

Procedure:-

- 3.1 Put a new replacement CR2032 cell into the battery compartment as shown below:

The right hand edge of the battery is inserted first against the contact.



Press firmly down on the left hand side of the battery to click the battery into place.




- 3.2 Replace the battery door; turn clockwise to lock it into place.



- 3.3 Cover the battery door with either a new label (Part # 100-000502) or reuse the old one.



- 3.4 Use LogTag Analyzer to configure the recorder.

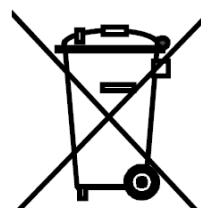

Please dispose the old battery according to your local environmental regulations.