

Data Collector RTR-500DC

Introductory Manual

Thank you for purchasing our product. This manual explains in brief how to get an RTR-500DC Unit ready for use and how to install the software.

Details about how to use the software "RTR-500DC for Windows" and its functions can be found in the software "Operation Guide (Help)".

Distributed by MicroDAQ.com, Ltd. www.MicroDAQ.com (603) 746-5524

© Copyright T&D Corporation. All rights reserved. 2011.07 16504785008 (2nd Edition)

Important Notices and Disclaimers

In order to properly use this product, please carefully read this manual before using.

T&D Corporation accepts no responsibility for any malfunction of and/ or trouble with this product or with your computer that is caused by the improper handling of this product and will deem such trouble or malfunction as falling outside the conditions for free repair outlined in the attached warranty.

- All rights of this Manual belong to T&D Corporation.
- It is prohibited to use, duplicate and/or arrange a part or whole of this manual without the permission of T&D Corporation.
- Microsoft $(\ensuremath{\mathbb{B}}\xspace$ and Windows $(\ensuremath{\mathbb{B}}\xspace$ are registered trademarks of Microsoft Corporation USA and are binding in the USA, Japan and all other countries.
- Windows Vista is either a registered trademark or trademark of Microsoft Corporation in the United States, Japan, and/or other countries.
- All registered trademarks, company names, product names and logos mentioned herein or for products being used are the properties of T&D Corporation or of their respective owners.
- Specifications, design and other contents outlined in this manual are subject to change without notice.
- Please follow the safety precautions outlined in the manual carefully.
- We cannot guarantee nor are we responsible for safety if this product is used in any manner other than was intended.
- On-screen messages in this document may vary slightly from the actual messages.
- Please notify the shop where you purchased this product or T&D Corporation of any mistakes, errors or unclear explanations in this manual.
- T&D Corporation accepts no responsibility for any damage or loss of income caused by the use of our product.
- This product has been designed for private and/or industrial use only. It is not for use in situations where strict safety precautions are necessary such as in connection with medical equipment, whether directly or indirectly.
- We are not responsible for any malfunction or trouble caused by the use of our product or by any problem caused by the use of measurement results of our product. Please be fully aware of this before using our product.
- This Manual cannot be reissued, so please keep it in a safe place.
- Please read the warranty and provisions for free repair carefully.

Software User's Agreement

Disclaimers

- Although T&D Corporation has made operational tests on our software "RTR-500DC for Windows", we cannot guarantee that all operations will work properly under all conditions.
- T&D Corporation shall not accept any responsibility for any damage whether direct or indirect that results from the usage of "RTR-500DC for Windows".
- Specifications of "RTR-500DC for Windows" may be subject to change and service may be terminated without advance notice to the user. In such a case T&D Corporation shall not be responsible for any damages whether direct or indirect from the inability to use "RTR-500DC for Windows".
- T&D Corporation has no obligation to correct any defects found in "RTR-500DC for Windows".

Copyright

- The Copyright for RTR-500DC for Windows, including the program and relevant documents, belongs solely to T&D Corporation.
- The reprinting or redistribution for commercial purposes whether in part or in whole, in magazines or as a part of any product is strictly forbidden without the expressed consent of T&D Corporation. Any inquires concerning commercial redistribution should be directed to the Sales Department of T&D Corporation.
- Please do not attempt to make any changes or modifications to RTR-500DC for Windows.

Table of Contents

Introduction

Important Notices and Disclaimers2 Software User's Agreement3
Table of Contents 4
Safety Precautions and Instructions6
Explanation of Symbols6
What is "RTR-500DC"?12
Outline 12
Features of Wireless Communication Function 12
Features of the RTR-500DC13
Before Using this Product14
What are "Base Units", "Remote Units"
and "Repeaters"? 14
Basic Procedures16

Getting Ready

Package Contents	-18
Connect the Antenna	- 18
Appearance Diagram and Part Names	
Install the Battery	
Other Power Sources Available for Use	
Battery Replacement	- 20
Sleep Mode20	
Power and Auto Power Off Function	
Turning ON the Power	
Turning OFF the Power	
Auto Power Off Function	
Operations via Buttons and Operation Dial	
Using the Operation Dial	
Button Functions	
About the Icons and Abbreviations	
Installing the Software	
Before Installing the Software:	
Procedure for Installing the Software	
About the USB Device Drivers	-28
Procedure for Installing the	
USB Device Drivers	-29
Checking the USB Device Drivers	-31
Re-installing a USB Device Driver	-34

Carrying out Registration, Settings, and Operation

Process of Making Registrations and Settings-38
1. Make Settings for Base Units 38
2. Register Data Loggers as Remote Units 38
3. Register Repeaters (when necessary) 38
Check Wireless Signal Strength and
Make Wireless Route Settings 39
About Applications and the Operation Guide -40
How to Open the Applications 40
Communication between
RTR-500DC and PC41
Operations which require
RTR-500DC Communication 41
Communication between
Remote Unit / Repeater and PC42
Operations which require Remote Unit / Repeater <=> PC
Communication 42
Wireless Communication between RTR-500DC
and Remote Unit43
Operations which require RTR-500DC 🖙 Remote Unit
Wireless Communication 43
Operating Remote Units
via Multiple RTR-500DC Units 43
How to Register the Same Remote Unit to Multiple
RTR-500DC Units 43
Optical and Cable Communication between RTR-
500DC and Remote Units44
Operations which require RTR-500DC <>> Remote Unit
Optical and Cable Communication 44
Optical Communication: RTR-501 / 502 / 503 / 505 44
Cable Communication: BTB-574 44

Communication Functions

Downloading Data by Group46
Wireless Communication: [THUL Gather Data] 46
Reading Judgement Results
in the "Gathering Result" Window 48
Downloading Data
from a selected Remote Unit49
Wireless Communication: [THE Gather Data] 49
Optical / Cable Communication: [Op Gather Data] 50
Monitoring51
Gather Current Readings and Current Status of Remote
Unit : [🎹 🛄 Monitor Mode] 51

Communication Conditions for Monitoring 52
Viewing a Monitoring Window53
Warning Monitoring56
Target Remote Units for Warning Monitoring 56
Warning Conditions 56
Warning Buzzer 56
Starting / Stopping Remote Unit Recording 57
Wireless Communication: [WILL Record Settings] - 57
Optical / Cable Communication:
[OP-re Record Settings] 58
Registering and Unregistering Remote Units for
"Visitor Entry"59
[** WL Visitor Entry] 59
Registration Error Messages 59
Deleting "Visitor Entry" Registrations59
[¥ WL Visitor Entry] 59
Communication with Remote Units registered
for "Visitor Entry" 60
Communication Errors61
When the memory capacity is full: [Memory Full] 61
When the Signal Strength is weak: 62
Application related Communication Errors 62

Viewing Functions

Viewing Data Stored in RTR-500DC64
Viewing a Data List: <list> button / [Data List] 64</list>
List of Data Collected from RTR-574 64
Detailed Information of Data: <list> button / [Data List]65</list>
Viewing the Graph67
Graph Display: <list> button / [Data List] 67</list>
How to Read the Graph 67
Data Range Check and Judgement 69
Viewing Downloaded Data from RTR-574 in a Graph - 70
Data Downloaded via Wireless Communication 70
Data Downloaded via Cable Communication 70
Operating the Graph71
Changing the Channel on Display 71
Enlarged View 71
Checking the Highest / Lowest Readings 71
Deleting Selected Data72
Deleting Selected Data : [Data List] / <list> button 72</list>

Making RTR-500DC Unit Settings / Others

Operational Settings for RTR-500DC	
Changing Unit of Temperature	
Adjusting the Backlight	
Adjusting Contrast	
Checking Memory	
Deleting All Data	
Making Clock and Time Zone Settings via RTR-500D	
Operations	
Figuring Out Your Time Zone	- 77
Using the RTR-500DC in Areas that Observe Daylight	
Savings Time	
Setting the Buzzer OFF	
Checking Battery Status of the RTR-500DC	
Monitoring Radio Waves	
Uninstalling the Software	-80
Menu List	
[THUL Gather Data]	
[꺅 .ul. Monitor Mode]	
[₩ WL Record Settings]	
[TF INL Visitor Entry]	
[OP 🛹 Gather Data]	
[OP Record Settings]	
[Data List]	
[Set Functions]	
FAQ	
Q&A about RTR-500DC	
Q&A about Settings	
Q&A about Operations after Settings	
Specifications	
Software (RTR-500DC for Windows)	- 93
Options	-94
Data Collector RTR-500DC WarrantyOn Ba	ack

Safety Precautions and Instructions

The following items should be strictly obeyed for the safe usage of this Unit, and for protecting yourself and other people from bodily harm and/or damage to property. Before using this product, please read the following carefully and fully understand the contents.

Explanation of Symbols Explanation of Warning Symbols

These entries are actions that absolutely under no circumstance should be taken. The taking of such an action may cause serious personal physical damage or death.
These entries are actions that if taken may lead to physical injury or damage to persons or things.

Explanation of Picture Symbols

\triangle	Denotes an important warning or caution.
\bigcirc	Denotes a forbidden action.
	Denotes an action that must be taken.

🕂 DANGER

0

When installing and using this Unit, make sure to follow all warnings and directions from your computer manufacturer.



Do not take apart, repair or modify the Unit. Doing so may cause fire or electrocution.



If water or a foreign body enters the Unit, immediately disconnect cables, remove batteries, and stop using. Continued use may cause fire or electrocution.



Do not use this Unit in wet or humid places, such as a bathroom. Doing so may cause fire, electrocution, and/or malfunction.



Store the Unit and Accessories out of the reach of children. Not doing so may result in unexpected accidents and injury from playing with or swallowing parts.



Do not connect any communication cables connected to the Unit to telephone line outlets.

Continued use may cause fire or electrocution.



If any smoke or strange smells are emitted from the Unit, immediately disconnect the power and communication cables. Continued use may cause fire or electrocution.



Do not drop or expose the Unit to a strong impact. If that happens to the Unit, immediately disconnect the power and communication cables and stop using. Continued use may cause fire or electrocution.



Make sure to periodically remove dust and dirt from the AC adaptor plug. When performing maintenance please make sure to disconnect the plug from the outlet.

If dust is allowed to accumulate on the plug, moisture may cause poor insulation and result in fire.



Do not remove the battery or unplug the AC adaptor with wet hands. This may cause electrocution.

Distrib	uted by MicroDAQ.com, Ltd.	www.M	croDAQ.com	(603) 746-5524
	∕ ∆CAU	TION		
Â	Please note that this Introductory presupposition that details about enable network connection have that connection has been confirm T&D Corporation shall not be responsi third party may suffer, whether direct o use communication devices.	set-up o already b ned as wo ble for any	f any necessary been taken care o brkable. damages which a	equipment to of by the user and contractor, a user or a
0	Further, T&D is not responsible fo whether direct or indirect, caused			
0	This Unit has been designed for p It is not for use in situations when such as in connection with medic	e strict sa	afety precautions	are necessary
0	Harmful gases or chemicals may Unit. Also, coming in contact with people handling the Unit. Therefore environment that is exposed to cl	n hazardo ore, do n	ous substances, ot use or store th	may cause harm to le Unit in any
0	This Unit is not waterproof. If the Unit gets dirty, wipe it with a clea	ın cloth.		
\Diamond	Do not store, leave, or use the Ur high temperature, extremely low t This may cause deformation to both th condensation on the inside of the Unit	temperat le outside	ures, or high hur casing and the insi	nidity. de. It may also cause
0	Battery terminals may provide ins This may lead to data loss.	ufficient	contact due to a	ge or vibration.
	Battery terminals may provide ins This may lead to data loss. Battery life varies depending upon the frequency of communication, ambient performance.	type of ba	ttery, the measurin	g environment,
0	If the Unit is not to be used for a l remove the battery. Leaving batteries inside the Unit may o	01	*	
\bigcirc	Do not use an AC adaptor other t Unit. Doing so may cause fire or malfunction		that is specified	for use with the
\Diamond	Please do not insert fingers or for	eign obje	ects into cable co	onnection jacks.
\bigcirc	Make sure that all cable plugs are improper connection. Also, when the cord, but hold the connector	unplugg	ing cables from t	

\bigcirc	Do not cut or process the cords for the AC adaptor or the communication cables. Also, do not twist, pull on or swing any of the cords.
0	To prevent damage to the Unit from static electricity, remove static electricity from your body by touching metal around you (door knob, window frame) before touching the Unit. Static electricity may cause not only damage to the Unit, but may cause breaks in or a loss of data.
\triangle	Do not disconnect the communication cable during wireless communication or USB communication. Doing so may cause adverse effects to the Unit and/or PC.
\land	We shall not guarantee the Unit's operation if it has been connected to a PC using a USB hub or a USB extension cable.
\bigcirc	Do not use or store the Unit in the following places. Doing so may cause electrocution, fire and/or other adverse effects to the Unit and/or other surrounding devices. -Areas exposed to direct sunlight This will cause the inside of the Unit to become overheated and may cause fire, deformation, and/or other damage including malfunction. -Areas exposed to strong magnetic fields This may cause damage including malfunction. - Areas exposed to water leakage This may cause electrocution or other damage including malfunction. - Areas exposed to static electricity. This may cause damage including malfunction. - Areas exposed to excessive vibration This may cause including malfunction. - Areas exposed to excessive vibration This may cause injury, malfunction, damage or loss of proper electrical contact. - Areas that are not flat or level This may cause the Unit to fall and result in injury and/or damage. - Areas near fire or exposed to excessive heat This may cause damage including malfunction and deformation. - Areas exposed to excessive dust, dirt and smoke This may cause damage including malfunction.

Notes and Precautions for Installing Wireless Communication Devices

When installing wireless communication devices take special care in selecting locations so as to ensure proper communication.

Note that even after a successful installation, due to changes in environmental conditions, communication errors may occur when restarting the system.

As far as possible, try to keep wireless communication devices away from metals and set them up in high unobstructed positions.

- Please take note that in many instances, walls, floors, stairs, fences and desks will contain metals. In order to carry out communication between indoor and outdoor units, please locate indoor units near a window so that radio waves can be easily transmitted.
- Please install these devices more than 30cm away from walls or boards containing metal.
- If wireless communication units are placed in a metal container such as a freezer or refrigerator, the possible wireless communication range will be shortened. In most cases radio waves are transmitted via doors and door openings so place devices as near to doors as possible.



Place so that the antenna is away from objects or walls.

As far as possible, keep the devices away from noise-emitting sources.

- Equipment such as some industrial instruments, electronic devices or fluorescent lamps generate noise. Please place Units more than 1 meter away from such devices.
- Please place Units more than 1 meter away from computers and other devices which emit noise.
- Keep all wires as far away from wireless communication devices as possible. Please be careful about placing near any wiring or cables such as power supply cables, telephone wires or LAN cables.

Objects which contain lots of water, such as plants or soil, absorb radio waves. We highly recommend that such materials should not be placed between or near wireless communication Units.

- When measuring temperature in a greenhouse it has been reported that as plants grew, communication errors also increased.
- Do not place Units directly on the ground.

Do not place devices which are using the same communication frequency channel in the same area.

- If the same channel is used for multiple devices not only will more communication errors occur, but battery life will also be shortened.
- If there is a possibility that devices with the same frequency channel will be in wireless communication at the same time, please make sure to make changes to the frequency channels so they are not the same. For more details about frequency channels for our wireless products, see the Specifications.

After having made an installation, check the wireless signal strength.

Checking from the software:

The supplied software application includes a feature to check for wireless signal strength. In the RTR-500DC Settings Utility, in the [Wireless Route Settings] menu it is possible to check signal strength.

Checking from the RTR-500DC:

In the Main Menu of the RTR-500DC, open [Monitor Mode] - [Specify Remote Unit]; check the signal strength by looking at the antenna icons displayed in the monitoring window.

A Compliance Information

FCC Statement



This device complies with Part 15 of the Federal Communications Commission (FCC) rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To comply with the limits for the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be installed in computer equipment certified to comply with the Class B limits.

All cables used to connect the computer and peripherals must be shielded and grounded. Operation with non-certified computers or non-shielded cables may result in interference to radio or television reception.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note about Antenna Usage: This device has been designed to operate with the supplied antenna only. Use of any other antenna is strictly prohibited.

IC Statement

This device complies with RSS-210 of the Industry Canada (IC). Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme RSS 210 d'Industrie Canada.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

🕂 Important Notice

Wireless products cannot be used in countries other than where those products have been approved for use, according to that country's wireless regulations.

T&D Corporation shall in no manner whatsoever take responsibility for the usage of these products, nor be liable in any manner for legal consequences stemming from the usage of these wireless products in unapproved areas.

What is "RTR-500DC"?

Outline

The RTR-500DC is a user-friendly wireless communication Data Collector designed for hand-held portability. Without having to manually gather the data loggers, it is possible, via wireless communication, to collect data from data loggers that have been registered as Remote Units.

The data can then be easily displayed in graph form in the LCD display of the Data Collector enabling the immediate on-the-spot checking of data.

The RTR-500DC is compatible with any wireless Data Loggers in our RTR-500 Series.

Compatible Data Loggers

RTR-501 / 502 / 503 / 505 / 574

* RTR-505 is a collective name for RTR-505-TC, 505-Pt, 505-V, 505-mA, and 505-P.

Features of Wireless Communication Function

Downloading Data via Wireless Communication

The wireless communication range between a Data Logger and an RTR-500DC is about 150 meters (500 ft). It is possible to download data from Data Loggers without having to handle them. Moreover, by setting up a Repeater, it is possible to extend the wireless communication range.

Monitoring / Warning Monitoring Function

Using the monitoring function, the RTR-500DC carries out wireless communication at a set interval with the registered Data Loggers (Remote Units) to monitor Current Readings and Remote Unit Status. If a warning occurs in a Remote Unit for which the monitoring function is active, users will be notified by "beeping" sound.

Registering up to 224 Data Loggers to one RTR-500DC

Up to 224 Data Loggers can be registered into one RTR-500DC. Data Logger registration is carried out in Groups, each is assigned a frequency channel for communication. Groups can be made and registered to match your purpose: by location, by item and so on.

Operating Remote Units via Multiple RTR-500DC Units

Not only can one RTR-500DC unit be set up to manage a large number of Remote Units, but multiple RTR-500DC units can be used to communicate, via wireless communication, with one Remote Unit. The same Remote Unit can be registered to multiple Base Units (RTR-500DC), either by using the software

"RTR-500DC for Windows" and copying the Base Unit registration information into a multiple number of Base Units, or by using the "Visitor Entry" function by having the Base Unit read the Remote Unit info directly without using the software. In this way it is not necessary to repeat the Remote Unit registration process.

Starting and Stopping Recording

It is possible to set to start and stop recording for a Data Logger from the RTR-500DC.

Features of the RTR-500DC

Graph Display of Recorded Data on High Quality LCD

It is possible to view the data collected from Data Loggers in graph form on the RTR-500DC LCD. Here you can check whether a set Upper / Lower Limit has been exceeded or not, as well as, the highest and lowest readings.

Holds up to 15 Remote Units at Full Storage Capacity

When downloading units at non-full storage capacity, it can store and manage up to 250 downloading sessions.

Easy One-Hand Operation

The handy Operation Dial makes the operation of the RTR-500DC simple; moving the dial up and down displays the various menu selections which can be easily selected by pressing in on the dial.

Data Backup Function

When battery power becomes low, the Unit will automatically go into sleep mode in order to protect the data. After going into sleep mode, the Unit can retain recorded data for about a month.

Various Power Supplies and Energy Saving Function

It is possible to supply power to the RTR-500DC from any of the following: AAA alkaline batteries, AAA Ni-MH batteries, USB bus power, or AC adaptor (optional).The energy saving function will automatically turn off the Unit to save battery power if the Unit is not used for about three minutes.

Firmware Update Function

The firmware can be easily updated by connecting the target RTR-500DC with a USB communication cable to the computer. As newly compatible devices are released, firmware updates will be periodically released to support these changes. For more about how to update firmware and the latest update information, visit our T&D website (http://www.tandd.com/).

Before Using this Product

What are "Base Units", "Remote Units" and "Repeaters"?

The following terms are used throughout this Manual. The definitions of the terms are as follows:

Base Unit

This term is used to refer to any RTR-500DC unit that has been set up as Base Unit. A Base Unit collects current readings and data measured by and recorded in Remote Units via wireless communication as well as carries out monitoring.


Remote Unit

This term is used to refer to any RTR-500 Series Data Logger that has been registered as a Remote Unit. A Remote Unit measures and records various items such as temperature, humidity and so on. The wireless communication range between a Remote Unit and a Base Unit, if unobstructed and direct, is about 150 meters (500 ft).

* RTR-505-TC, 505-Pt, 505-V, 505-mA, and 505-P are collectively referred to as the "RTR-505".

Repeater


This term is used to refer to any RTR-500 unit that has been registered as a Repeater. If wireless communication cannot successfully be carried out due to obstacles, or if you wish to extend the wireless communication range, please add Repeater(s) between Remote Unit(s) and the Base Unit.



By registering and making settings with the dedicated software "RTR-500DC for Windows" it is possible to create a system whereby wireless communication will be possible between the registered Base Units, Remote Units, and Repeaters.

About Groups

When registering Remote Units and Repeaters to a Base Unit, it is helpful to organize and register them in Groups depending on location, purpose or either criteria. Each Group can then be assigned a communication frequency channel. Remote Units and Repeaters cannot be registered to more than one Group.



About Number of Possible Registrations

Number of Groups : Up to 7 Groups per RTR-500DC Unit

Number of Remote Units: Up to 32 units per Group (16 units for RTR-505 / 574) Number of Repeaters: Up to 15 units per Group

- Even if the number of Groups is reduced, the maximum number of Remote Units / Repeaters per Group does not change.
- Even if the number of Remote Units / Repeaters is reduced, the maximum number of Groups per RTR-500DC unit does not change.

Basic Procedures

The following shows the basic flow of procedures.

Getting Ready

1. Check the Base Unit

Check the Package Contents and Inspect the Unit

Check the Basic Operations

- Install the Battery
- Operations via Buttons and Operation Dial
- About the Icons and Abbreviations

2. Install the software "RTR-500DC for Windows"

Precautions before Installation and Installation Procedure Software Operating Environment

3. Install the USB Device Driver

Installation Procedure Check the USB Device Drivers for Base Units, Remote Units and Repeaters

4. Get Ready the Remote Units and Repeaters (where necessary)

Follow directions in the User's Manual that accompanies the Remote Unit or Repeater.

Notes about Operation

Check the Communication Methods

- Communication between RTR-500DC and PC
- Communication between Remote Unit / Repeater and PC
- Communication between RTR-500DC and Remote Unit

Registering Devices and Making Settings (using "RTR-500DC for Windows")

Opening Applications and Checking the Menu

Checking the Process of Making Registrations and Settings

- For details including info about the settings window, please see the "Operation Guide" in the software or the "Help" menu in the Settings Utility.

Using RTR-500DC Functions

- Communication Functions between the RTR-500DC and the Remote Unit (Monitoring, Downloading Data, etc.)
- Viewing Functions (Graph, Data List, etc.)

Getting Ready

This section explains what needs to be done before registrations and settings can be made.

Package Contents	18
Connect the Antenna	18
Appearance Diagram and Part Names	19
Install the Battery	20
Other Power Sources Available for Use	
Battery Replacement	20
Sleep Mode20	
Power and Auto Power Off Function	
Turning ON the Power	
Turning OFF the Power	
Auto Power Off Function	
Operations via Buttons and Operation Dial	
Using the Operation Dial	
Button Functions	
About the Icons and Abbreviations	
Installing the Software	24
Before Installing the Software:	24
Procedure for Installing the Software	25
About the USB Device Drivers	28
Procedure for Installing the	
USB Device Drivers	29
Checking the USB Device Drivers	31
Re-installing a USB Device Driver	34

Package Contents

Check the contents of the package.

		C. Track	
RTR-500DC x1	Antenna x 1	USB Communication Cable x 1	AAA Alkaline Battery (LR03) x 2
Software CD-ROM x1	Introductory Manual (Warranty) x 1		

Connect the Antenna


Connect the supplied antenna to the antenna connector.



Make sure to install the software before connecting an RTR-500DC to a PC with the USB cable.

(603) 746-5524

Appearance Diagram and Part Names

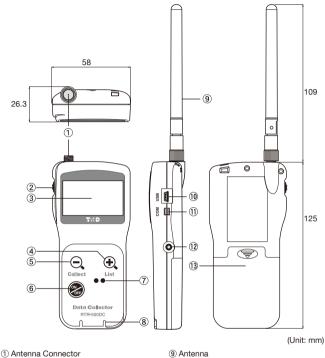


- 2 Operation Dial
- 3 LCD Display
- (4) <List> Button
- 5 <Collect> Button
- 6 <Power> Button
- (7) Optical Communication Area
- (8) Slitted Area

- 10 USB Communication Cable Jack
- RS-232C Communication Cable Jack
- 12 AC Adaptor Jack
- Battery Cover

From hereafter in this manual, the RTR-500DC will be referred to as the "Unit".

Install the Battery

Remove the battery cover from the back of the Unit, and insert two AAA alkaline batteries.

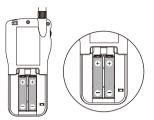

- Make sure to use the new and same kind of batteries.
- Make sure that + and are in the correct direction.
- The RTR-500DC cannot recharge batteries.
- Do not insert or change batteries with wet hands.

Other Power Sources Available for Use

AAA Ni-MH Batteries AC Adaptor AD-0638 (sold separately) USB Bus Power

Battery Replacement

If the Unit is left without a battery or battery power is lost for more than 5 minutes, all recorded data may be erased.

When battery power becomes low, a battery life warning mark [] will appear in the Unit's LCD display. When this mark appears, try to replace the batteries with new ones as soon as possible.



Sleep Mode

If the batteries are not changed and power becomes even lower, the Unit will automatically go into sleep mode in order to save data. In sleep mode, the Unit cannot be turned on or operated as usual.

Power and Auto Power Off Function

Turning ON the Power

Press the <ON/OFF> button or the Operation Dial to turn on the power.



Turning OFF the Power


Press the <ON/OFF> button. Turning off the power cannot be carried out from the Operation Dial.

Auto Power Off Function

If the Unit is not used for about three minutes, it will automatically turn off to save battery power.

Operations via Buttons and Operation Dial

Using the Operation Dial



Turn: Choose Menu and List / Change Numerical Values

- By moving the dial up and down, the arrow(cursor) will move to allow you to choose the desired item.
- When setting a numerical value, by moving the dial up the value will become larger, and by moving the dial down the value will become smaller.

Press: OK / Cancel

- By pushing in on the dial, you can make a desired menu selection and complete or activate a setting.
- Pressing during a download session or searching will cancel the operation.
- Pressing while viewing a graph or checking data details will cancel the operation and return to the Main Menu

Press and Hold: Change the Display

- By pressing and holding the dial while viewing a graph display, you can change the channel on display.

Button Functions



<Collect> Button

- Press this to download via wireless communication.
- Press to open the window where you can choose the Group for communication
 - Press while the entire graph is on display to move cursor to the lowest or highest value.
- Press to return the enlarged-graph to its original size.



<List> Button

- Press to open the Data List Display.
- Press while viewing the Data List to view details for the data on display.
 - Press while the entire graph is on display (x1) to zoom in on the image.

About the Icons and Abbreviations

The following contains some brief general explanations about icons and abbreviations.

Main Menu Window

Main Menu	Jan. 18711
¢ ∀ ₩LGather	Data
₩ WLMonitor	
₩WL Record	Settings
₩ WLVisitor	r Entry
↓0Pv ≊Gather	Data

ΨWL	Menus for Wireless Communication
0P - /*	Menus for Optical or Cable Communication
€	An item marked with an arrow denotes it has been selected. Turn the dial to move the arrow. By pressing the dial, the selected item will be activated.
÷	These icons may appear on the left side of the Menu and List Display. They indicate that there are more menu or list items above or below for view; you can scroll the display by moving the dial up and down.
[Back]	Move the arrow to [Back] and push the dial to return to the previous window.
Execute	Move the arrow to [Execute] and push the dial to carry out the operation.
RU	Remote Unit(s)
VRU	Visitor Remote Unit(s)
Rpt	Repeater(s)
СОММ	Communication Example: [COMM Error]

Installing the Software

Make sure to install the software before connecting the Unit to a PC with a USB cable.

If you have connected a Unit to your computer before installing the USB device driver, make sure to click the [Cancel] button in the Wizard window when it pops up on the computer display. Then disconnect the USB cable from the Unit.

Before Installing the Software:

Is Windows operating properly?

If Windows is not operating properly, the software may not be installed correctly or it may not operate properly.

Make sure to check that the OS you are running and "RTR-500DC for Windows" are compatible.

Microsoft Windows 7 32/64bit English, Spanish

Microsoft Windows Vista 32bit English, Spanish

Microsoft Windows XP 32bit (SP2 or above) English, Spanish

- For details about the necessary operating environment, see page 93.

Quit all open applications.

If you are running other applications, make sure to quit them before installation. If you have any permanently active software, such as a virus check or scan program in your computer, make sure to also quit them.

To install "RTR-500DC for Windows", it is necessary to have Administrator rights (Computer Administrator) for the computer in which you wish to install it.

Procedure for Installing the Software

This explanation uses displays from Windows XP SP2.

If your OS is Windows Vista or Windows 7, the window layout may be slightly different. However, the message contents and the button operations are the same, so please follow the directions as written below.


- 1. Open Windows.
- **2.** Place the supplied software (CD-ROM) into the CD-ROM drive. The "Install Program" window will appear soon.



In Windows Vista or Windows 7, if the [Auto Play] window appears, click on "Run Start.exe".

If the "Install Program" window does not automatically open, please open it by double clicking on the CD drive icon in [My Computer].

3. Select "Install RTR-500DC for Windows" and click the [Execute] button to start the installation.

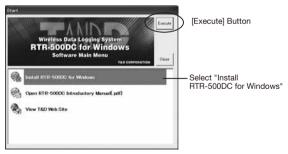

4. The "RTR-500DC for Windows Setup Wizard" window will appear.




Click the [Next] Button.

5. The "Software License Agreement" window will appear.



- Please read all the terms stipulated in the agreement. Check "I accept the terms of the license agreement" if you accept the terms.
- 2 Click the [Next] button

6. The "Choose Destination Location" window will appear.

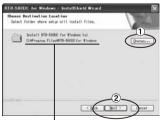

- [By clicking the [Change] button it is possible to change the installation folder.
- Click the [Next] button.

Info for file to be installed

7. The "Ready to Install the Program" window will appear.



Click the [Install] Button to begin installation.

For Windows Vista and Windows 7

 Although a warning message such as below may appear, there is no problem, please move on to the next step.

Warning Message

For Windows XP



 After installation has been completed, "RTR-500DC for Windows" will be registered in the Window's [Start] Menu.

After having installed the supplied software it is necessary to install the USB Device Driver.

- See from page 28 of this Manual for details.

About the USB Device Drivers

Have you already installed the supplied software?

Make sure to install the software before connecting the Unit to a PC with a USB cable.

For Units using a USB connection, it is necessary to first install the Software, and upon connecting the Unit to the PC with a USB cable it is necessary to install the USB Device Driver. The USB Device Driver enables the PC to recognize a connected device and ensure proper operation.

- Make sure that the USB cable is inserted fully, so as not to cause an improper connection.
- Login using a User Account with Administrator (Computer Administrator) rights.

Users of Windows XP must carry out the Installation Procedure.

The first time a Unit is connected to your PC, the [New Hardware Detection Wizard] will automatically open.

Please carry out the procedures on the following pages to install the USB Device Drivers for the Base Unit (RTR-500DC), Remote Units (RTR-574), and if necessary, Repeaters (RTR-500).

- In XP, if the Wizard window does not automatically open, installation may have not been fully completed or failed. Please check whether the USB Device Driver has been properly installed by following the directions on page 31.

Users of Windows Vista or Windows 7 do not have to carry out this installation.

By installing the supplied software, the USB Device Drivers for the Base Unit, Remote Units and Repeaters will also be automatically installed. It is not necessary to carry out any extra steps to install the USB Device Driver.


- To check a USB Device Driver, follow directions as shown in this Manual on page 31.

Procedure for Installing the USB Device Drivers


Carry out each USB Device Driver installation for only one device at a time in the following order: Base Unit, Remote Units (RTR-574 only), and/or Repeaters.

Users of Windows XP should carry out the following procedure to install the USB Device Drivers.

1. By connecting a Base Unit to your computer, the [New Hardware Detection Wizard] will automatically open.



The Wizard window will only appear upon the first connection.

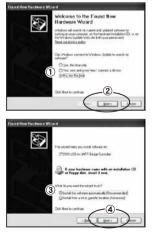

1

2. The Installation process will begin.


- 1) Check "No, not this time".
- 2 Click the [Next] button.

- ③ Check "Install the software automatically (Recommended)".
- ④ Click the [Next] button.



If a warning message window appears, click the [Continue Anyway] button, and continue with the installation.

- **3.** Once the completion message appears, installation has finished. Click the [Finish] button.
- **4.** When using a Remote Unit (RTR-574) or a Repeater (RTR-500), connect one device at a time by USB to your PC and repeat the above procedure from step 1.

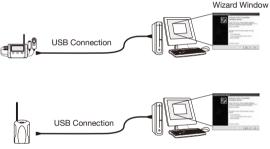

The Wizard window will only appear upon the first connection.

- See page 31 of this Manual for about how to confirm that the USB Device Driver has been properly installed.


Checking the USB Device Drivers

Check the USB Device Driver installation for only one device at a time for each of the Base Unit, Remote Units, and Repeaters.


The checking procedure is the same for the Base Unit, Remote Units and Repeaters. Check using the following steps:

1. Open the Device Manager window.

Procedure example: (The screen shots below are from Windows XP SP2)

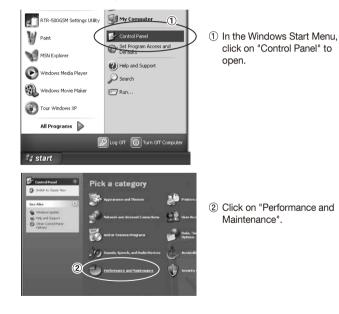







③ Click on "System".

- In the System Properties Window, click on the [Hardware] tab.
- Click the [Device Manager] button.
- Connect the target device to the computer with a USB cable and look at the icon displayed in the Device Manager window in order to check whether or not the USB Device Driver has been properly installed.

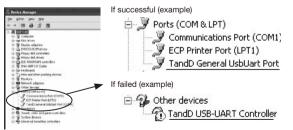



3. If your PC does not properly recognize a device, please re-install the USB Device Driver by following the directions on the next pages.

Re-installing a USB Device Driver

1. Right click on the icon.



- 2. From the pop-up menu click on "Properties".
- **3.** When the following window appears, click on the [Reinstall Driver] button to display the Wizard window.

[General] Tab Window



4. If you are using Windows XP, please follow the directions below and move on to step 6.




- Check the "Install from a list or specific location (Advanced)".
- 2 Click the [Next] button.

Teell



- 3 Check the "Include this location in the search."
- (4) Click the [Browse] Button.

5. If you are using Windows Vista or Windows 7, please follow the directions below.

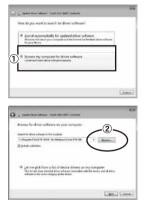

1 Click the "Browse my computer for driver software".

2 Click the [Browse] button.

6. Specify the location of the USB Driver.



- (1) Click the plus (+) sign next to the folder into which the software was installed and specify "Device Driver" as the driver location.
- 2 Click the [OK] button to return to the Wizard window.

7. In the Wizard window, check to make sure that the USB Driver is specified correctly. Then click the [Next] button.

For Windows XP



For Windows Vista and Windows 7



Location Example:

C:\Program Files\RTR-500DC\Driver RTR-500

8. The installation process will begin.

Please note that the following warning messages may appear during installation. However, this will cause no problems with installation. Please move on to the next step.



- Button.
- **9.** After installation has been completed, please click the [Finish] or [Close] button.
- **10.** Please check whether the USB Device Driver has been properly installed.
- See page 31 of this Manual for about how to confirm that the USB Device Driver has been properly installed.

Carrying out Registration, Settings, and Operation

This section explains a few items that need to be checked before carrying out registration and settings for the Base Units, Remote Units, and Repeaters via the software, and before starting operation.

 Make Settings for Base Units 38
2. Register Data Loggers as Remote Units 38
3. Register Repeaters (when necessary) 38
Check Wireless Signal Strength and
Make Wireless Route Settings 39
About Applications and the Operation Guide -40
How to Open the Applications 40
Communication between RTR-500DC and PC 41
Operations which require
RTR-500DC IPC Communication 41
Communication between
Remote Unit / Repeater and PC42
Operations which require
Remote Unit / Repeater <=> PC Communication 42
Wireless Communication between
RTR-500DC and Remote Unit43
Operations which require
RTR-500DC ⇐⇒ Remote Unit Wireless Communication 43
Operating Remote Units via Multiple RTR-500DC Units43
How to Register the Same Remote Unit
to Multiple RTR-500DC Units 43
Optical and Cable Communication between
RTR-500DC and Remote Units44
Operations which require RTR-500DC 🖘 Remote Unit
Optical and Cable Communication 44
Optical Communication: RTR-501 / 502 / 503 / 505 44
Cable Communication: RTR-574 44

Process of Making Registrations and Settings

This section briefly explains the procedure for carrying out registration of devices and the making of settings. For details about viewing the settings window and how to make settings, please refer to the "RTR-500DC for Windows" Operation Guide.

1. Make Settings for Base Units

- 1. Connect the Base Unit with a USB cable to your computer.
- 2. Open the RTR-500DC Settings Utility from the Application Menu.
- 3. Open the [Base Unit Settings] Menu to make necessary settings.
- Do not connect more than one RTR-500DC to your computer at one time.

Base Unit Registration Items

Unit of Temperature* / Clock / Time-Zone

* Unit of temperature to be used in the Remote Unit recorded data and in the display of the Remote Unit.

2. Register Data Loggers as Remote Units

- 1. In the RTR-500DC Settings Utility, open the [Remote Unit Settings] Menu.
- 2. Click the [Register] button.
- When the direction appears in the application window, set up the RTR-500DC and the Remote Unit to enable communication and carry out registration.

Remote Unit Registration Items

Group Name / Remote Unit Name / Frequency Channel / Recording Mode / Recording Interval / Warning Monitoring Settings

3. Register Repeaters (when necessary)

Repeaters can be registered to help increase range and improve wireless communication.

- 1. In the RTR-500DC Settings Utility, open the [Repeater Settings] Menu.
- 2. Click the [Register] button.
- When the direction appears in the application window, set up the Repeater to enable communication and carry out registration.

Repeater Registration Items

Group Name / Frequency Channel

4. Check Wireless Signal Strength and Make Wireless Route Settings

After all registrations and settings have been completed, place the Remote Units and Repeaters in their actual positions, check wireless signal strength and make wireless route settings.

- 1. In the RTR-500DC Settings Utility, open the [Wireless Route Settings] Menu.
- 2. Click on the [Test Signal] button to check the signal strength.
- 3. Make wireless route settings.
- For details about viewing the signal strength and how to make wireless route settings, please refer to the Operation Guide.

About Applications and the Operation Guide

After installation has been completed, "RTR-500DC for Windows" will be registered in the Window's [Start] Menu.

How to Open the Applications

Click on Windows [Start] - [All Programs] - [RTR-500DC for Windows] and then click on the item in the Menu you wish to open.



"RTR-500DC for Windows" is made up of six applications and an Operation Guide.

RTR-500DC Settings Utility	Application designed for registering and making settings for Base Units, Remote Units, and Repeaters
RTR-500DC Manager	Application designed for downloading recorded data from a Base Unit to a PC
Temperature / Humidity Graph	Application designed for viewing RTR-501 / 502 / 503 / 505 recorded data
Multi-scale Graph	Application designed for viewing RTR-574 / 505 recorded data
Operation Guide	Read this for details about how to operate each of the applications.

Operation Guide

It contains all of the necessary information for the proper use of "RTR-500DC for Windows". Please read carefully before carrying out registrations or making settings.

Help Menu for Applications

If you become unsure of how to make settings or carry out any operations while using any of the applications, click the [Help] Button in the display to find solutions and guidance.

Communication between RTR-500DC and PC


Operations which require RTR-500DC \Leftrightarrow PC Communication

Base Unit Settings, Settings Changes, Initialization, etc. Downloading Recorded Data from RTR-500DC to PC

Have you already completed installing "RTR-500DC for Windows" and the USB device drivers?

Do not connect more than one RTR-500DC at a time to the PC.

Connect the RTR-500DC with the supplied USB communication cable to your PC to carry out communication.



- Make sure that the cable is inserted fully, so as not to cause an improper connection.

Communication between Remote Unit / Repeater and PC


Operations which require Remote Unit / Repeater ⇔ PC Communication

Remote Unit / Repeater Registration, Settings Changes, Initialization, etc.

Have you already completed installing "RTR-500DC for Windows" and the USB Device Drivers?

For RTR-501 / 502 / 503 / 505


Place a Remote Unit face down on the Base Unit connected to the PC to carry out communication.



Align the slitted areas

For RTR-574 and RTR-500

Connect the RTR-500DC with the supplied USB communication cable to your PC to carry out communication.



- Make sure that the cable is inserted fully, so as not to cause an improper connection.
- Do not connect two or more of the same device to your PC at one time.

Wireless Communication between RTR-500DC and Remote Unit


Operations which require RTR-500DC ⇔ Remote Unit Wireless Communication

Opening the [TRUE] Menu in the RTR-500DC

Wireless communication can be carried out between RTR-500DC and the Data Loggers that have been registered and set as Remote Units by using "RTR-500DC for Windows".

Operating Remote Units via Multiple RTR-500DC Units

By registering the same Remote Unit to a number of RTR-500DC Units, it is possible to gather the Remote Unit info as well as download recorded data via wireless communication with any of the above RTR-500DC.



How to Register the Same Remote Unit to Multiple RTR-500DC Units

Set up a number of Base Units with the same registration contents including Repeaters

After saving the Base Unit info to the PC by using "RTR-500DC for Windows", transmit the collected contents of the file to a different RTR-500DC Unit.

 Open the RTR-500DC Settings Utility - [Tool] Menu - [Save Base Unit info]/ [Send Registration Contents to Base Unit]. (See the application's Help Menu for the details.)

Register Remote Units which have been registered in other Base Units

Register Remote Units for "Visitor Entry"

- In the Main Menu, open [WL Visitor Entry] - [Accept Visitor RU] - [Join VRU]. (See the page 59 for details.)


Optical and Cable Communication between RTR-500DC and Remote Units

Operations which require RTR-500DC ⇔ Remote Unit Optical and Cable Communication Opening the [00000] Menu in the RTR-500DC

This enables the user to download recorded data from Remote Units via methods other than wireless communication. The communication method will depend upon the type of Remote Unit.

Optical Communication: RTR-501 / 502 / 503 / 505

Place a Remote Unit face down on the RTR-500DC to carry out communication.



Cable Communication: RTR-574

Use an optional RS-232C serial communication cable (TR-6C10) to connect the RTR-500DC and the RTR-574 (Remote Unit).



Communication Functions

This section explains a few important communication functions and operations between the RTR-500DC and Remote Units that can be carried out from the RTR-500DC.

Downloading Data by Group	46
Wireless Communication: Wirele	
Reading Judgement Results	
in the "Gathering Result" Window	48
Downloading Data	
from a selected Remote Unit	49
Wireless Communication: Wireless	49
Optical / Cable Communication: OP - Gather D	ata] 50
Monitoring	51
Gather Current Readings and	
Current Status of Remote Unit : Monitor N	lode]51
Communication Conditions for Monitoring	52
Viewing a Monitoring Window	53
Warning Monitoring	56
Target Remote Units for Warning Monitoring	56
Warning Conditions	
Warning Buzzer	56
Starting / Stopping Remote Unit Recording	
Wireless Communication:	57 [ة
Optical / Cable Communication:	
OB Record Settings]	
Registering and Unregistering Remote Units	
for "Visitor Entry"	
[꺅 ሠL Visitor Entry]	
Registration Error Messages	
Deleting "Visitor Entry" Registrations	
Tr WL Visitor Entry]	59
Communication with Remote Units registered	
for "Visitor Entry"	
Communication Errors	
When the memory capacity is full: [Memory Full] -	
When the Signal Strength is weak:	
Application related Communication Errors	62

Downloading Data by Group

Wireless Communication: [W L Gather Data]


The RTR-500DC Base Unit can download recorded data from up to 128 Remote Units at one time.

- 1. In the Main Menu, open [WL Gather Data].
- 2. Select the Target for downloading.



[All Groups]: Download from all registered groups [Specify Group]: Download from only the specified group

3. Select the Download Mode in the [Execute] window.



① [COM Route] : Select route of communication

[Direct] : Communicate directly without Repeaters

[As Set]: Communicate according to Wireless Route Settings.

As the RTR-500DC is a hand held portable Base Unit, it is recommended to set to [Direct] so as to shorten communication time.

The above selection of communication route applies for communication with groups registered via the RTR-500DC Settings Utility. When communication is carried out with any group which has been registered for "Visitor Entry", always select [Direct].


* For details about "Visitor Entry", see page 59.

2 [Period] : Period for Download Settings

- [1 hour] to [47 hours] (in units of 1 hour)
- [2 days] to [300 days] (in units of 1 day)

[All Data] : All of the data stored in the Remote Unit will be downloaded.

4. Adjust the arrow to [Execute] and press the Operation Dial to search for Remote Unit and start the downloading.



Number of Remote Units for which download is in progress or completed

② Total number of Remote Units

The LCD screen as shown above means that recorded data is being (or has been) downloaded from three out of eight Remote Units for which wireless communication is being carried out.

3 Downloading status icon

If [*] is blinking a data downloading session is in progress.

④ List No.

This shows the number assigned automatically in the order that the data was downloaded.

⑤ Group Name

This shows the Group Name entered when Remote Unit Registration was carried out.

6 Remote Unit Name

This shows the Remote Unit Name entered when Remote Unit Registration was carried out.

- Move the arrow to [Cancel] and press the Operation Dial during a download session to cancel the operation.
- Upon completion of 250 downloading sessions, the RTR-500DC will stop downloading and display the judgement result. (See page 48 for details.)
- If there is not enough memory left in the RTR-500DC for the data stored in the Remote Unit, the RTR-500DC will skip it and go to the next Remote Unit to download data. Only Remote Units whose stored data does not exceed the available memory capacity in the RTR-500DC can be the target of downloading.

Reading Judgement Results in the "Gathering Result" Window

The judgement result will be displayed automatically upon completion of the downloading.

₩WLGathering Result)-	
↓[Back]	
No4(+)Group2 US574	
No3 f Group1 US503	
No2 s Group1 US502	
No1mfGroup1 US501	
<u> </u>	1

If the RTR-500DC has stopped downloading data upon completion of 250 downloading sessions, [Gather Rec.Limit] will appear on the LCD display.

Icons for Judgement Results

- [s]: Downloading succeeded. No data exceeds the set upper and lower limits.
- [+]: Downloading failed.
- [mf]: Download could not be carried out due to insufficient memory (Memory Full)
- [+]: The set upper limit has been exceeded.
- [+]: The set lower limit has been exceeded.
- [‡]: The set upper and lower limits have been exceeded.

Shortcut for the Graph Display

Select a Remote Unit Name from the list, and press the <List> button to view the graph.

- Data with such icons as [+] and [m] cannot be viewed in graph form.

Changing the Group Name on Display

By selecting a Remote Unit Name from the list and pressing the Operation Dial, the Group Name will disappear and only the Remote Unit Name will be displayed. If you press and hold while downloading recorded data or viewing a screen during downloading, you can change the Group Name on display.


Downloading Data from a selected Remote Unit

Wireless Communication: [W L Gather Data]

- 1. In the Main Menu, open [WL Gather Data].
- **2.** Open [Specify Remote Unit] and then select the Group and Remote Unit from which you wish to download data.



3. Select the Download Mode in the [Execute] window.



[COM Route] : Select route of communication [Direct] : Communicate directly without Repeaters [As Set]: Communicate according to Wireless Route Settings. As the RTR-500DC is a hand held portable Base Unit, it is recommended to set to [Direct] so as to shorten communication time.

(2) [Period]: Period for Download Settings [1 hour] to [47hours]: in units of 1 hour [2 Days] to [300Days]: in units of 1 day [All Data]: all of the data stored in the Remote Unit will be downloaded.

4. Adjust the arrow to [Execute] and press the Operation Dial to search for Remote Unit and start the downloading.

Pressing the Operation Dial during a download session or while searching for a Remote Unit will cancel the operation.

Optical / Cable Communication: [Optical / Cable Communication: [

 Set up the RTR-500DC and the Remote Unit to enable communication.


See page 44 for details.

2. In the Main Menu, open [OP Gather Data] to start the downloading. Pressing the Operation Dial during a download session will cancel the operation.


Screen during Downloading

As data is being downloaded, a changing graph and the high and low values for the received data will be continually shown.

If you press and hold down the Operation Dial while downloading recorded data you can change the channel on display.



Press/hold the Operation Dial while Downloading to change channels.



Monitoring

Gather Current Readings and Current Status of Remote Unit : [TT W. Monitor Mode]

The RTR-500DC Base Unit can be set up to communicate with the registered Remote Units, via wireless communication at the set interval, to gather current readings and current status of Remote Units.

- While using the Monitoring Function, the Auto Power Off Function will be disabled.
- 1. In the Main Menu, select [WL Monitor Mode].
- 2. In the [Target] window, select and set the monitoring range and interval.



1 [All Groups]

Remote Units in all groups registered to the RTR-500DC will be monitored, and current readings and current status for those units will be displayed consecutively every 2 seconds. Pressing the dial will start the communication (search).

② [Specify Group]

All Remote Units in the selected groups will be monitored, and current readings and current status for those units will be displayed consecutively every 2 seconds. Pressing the dial will display the [Choose a Group] window. Select and set the group to start the communication (search).

3 [Specify Remote Unit]

The selected Remote Units will be monitored. Pressing the dial will display in the following order: [Choose a Group] - [Choose a RU]. Select and set the Remote Unit to start the communication (search).

④ [Interval] (Monitoring Interval)

[10S] to [59 S]: in units of 1 second [1M] to [60 M]: in units of 1 minute

Pressing the Operation Dial during a monitoring session or while searching for a Remote Unit will cancel the operation.

Communication Conditions for Monitoring

The maximum number of Remote Units that can be monitored simultaneously is 128.

Notes about Monitoring Interval and Communication Time

If the wireless communication for monitoring takes longer than the set interval, the next monitoring session will be carried out without wait time.

Selecting [All Groups] or [Specify Group] when Repeaters have been registered

RTR-500DC for Windows automatically tries both communication without Repeater(s) and communication via Repeater(s) as registered.

When communication is carried out via Repeater(s), the RTR-500DC displays the Repeater icon(*1) in the monitoring window.

If the Repeater icon is displayed, the antenna(*2) shown in the same window will not necessarily indicate the signal strength in the registered communication route.

Selecting [Specify Remote Unit] when Repeaters have been registered

RTR-500DC carries out communication as registered.


It is possible to check for wireless signal strength in the registered route by the antenna(*2) shown in the monitoring window.

- * 1: See page 53- 55(12) for details.
- * 2: See page 53- 55(11) for details.

Viewing a Monitoring Window

When monitoring is carried out by group, the display time for each window is about 2 seconds. A four-channel data logger RTR-574 displays Illuminance and UV Intensity in one window, and Temperature and Humidity in another.

Window for BTB-501 / 502 / 503 / 505 EX: RTR-503 (Temperature and Humidity)




EX: RTR-505-V (Voltage)



EX: RTR-505-P (Pulse)



Windows for BTR-574 Illuminance and UV Intensity



Temperature and Humidity

24.0 0000 0.0 [°C] 0.0 0.0[%RH]

Tal

-10

9

1 Remote Unit on Display

The horizontal axis shows the total number of Remote Units that are currently being monitored. This does not appear when monitoring only one Remote Unit. When the total number of Remote Units is 10, for example, the axis shows the 1st Remote Unit in the left end and the 10th Unit in the right end. A black spot on the horizontal axis shows the currently displayed Remote Unit. If the spot appears in the middle of the axis, it means the 5th Remote Unit is currently displayed.

② Recording Status

[REC]: Recording in Progress / [STP]: Recording Stopped $\ /$ [PRG]: Programmed and Waiting

Recording Mode (Endless / → Onetime) Recording Interval (S: seconds / M: minutes)

③ Battery Level

The battery level for the Remote Unit will be shown in 6 stages. When the battery level is below stage "2", wireless communication errors may occur more frequently such as failure to download recorded data.

 FUL:
 Image: Constraint of the second se

④ The Amount of Recorded Readings in the Remote Unit

The estimated number of recorded readings stored in the Remote Unit is shown in a scale here. When the Remote Unit reaches its storage capacity, the scale becomes a full black bar.

....

5 Current Readings

For Illuminance and UV Intensity data from RTR-574, cumulative measurements can also be viewed.

6 Upper and Lower Limit Settings

These show the current Upper and Lower Limit Settings in the Remote Unit. The display position may differ depending on the Remote Unit being used. Nothing appears if Upper and Lower Limits have not been set with the Remote Unit.

⑦ Unit of Measurement

Temperature: °C , °F / Humidity: %RH / Illuminance: lx, klx Cumulative Illuminance lxh, Klxh, Mlxh , UV Intensity: mW/cm² Cumulative Amount of UV Light (*1) : mW/cm²h, W/cm²h Voltage : V 4-20mA : mA Pulse(*2) : Pulse1(Rising), Pulse4(Falling)

- * 1: For the Cumulative Amount of UV Light, "cm²" is abbreviated to "s" in the monitoring window.([mlu/s·h])
- * 2: Pulse count is shown as [P / Recording Interval and rising or falling symbol], indicating the pulse count during a set recording interval. ([P/105]]: Number of falling pulses at 10 second interval)

8 Warning Judgement (IIIII :Warning)

This appears if and when a measurement has been judged to qualify as a warning. Nothing appears if Upper and Lower Limits have not been set with the Remote Unit.

9 Remote Unit Name

This shows the Remote Unit Name entered when Remote Unit Registration was carried out.

10 Group Name

This shows the Group Name entered when Remote Unit Registration was carried out.

1 Antenna (Signal Strength)

The number of bars shows the signal strength for communication between the Base Unit and the Remote Unit. Having more bars means better communication status.

ቸ ቸና ቸና ቸብ ቸብ

12 Repeater Icon

This appears when communication is carried out via Repeater(s) as registered. This does not appear when communication is carried out without Repeater(s).

13 Total Pulse Count

When using an RTR-505-P (Pulse) this shows the cumulative number of pulses.

Warning Monitoring

In the process of monitoring, the RTR-500DC will monitor for warnings. When receiving information that a warning has occurred in a Remote Unit, a warning buzzer will sound.

Target Remote Units for Warning Monitoring


Warning Monitoring will be carried out only for those Remote Units which have been set to have warning monitoring ON in the Remote Unit Settings of the RTR-500DC Settings Utility. Remote Units which have been set to OFF will only have their current readings gathered.

Warning Conditions

A warning will be judged according to the Judgement Time and Upper / Lower Limits settings for each measurement item, which have been made in the RTR-500DC Settings Utility. If the Upper or Lower Limit is exceeded for the set length of time, a warning will be judged to have occurred.

Warning Buzzer

If a warning occurs in a Remote Unit that is being monitored, the buzzer in the RTR-500DC will emit a "beeping" sound.



About the Timing for Starting Warning Monitoring

If warning monitoring is started for a Remote Unit in which a warning is already occurring, neither the Warning Judgement Icon or Warning Buzzer will be activated.

When the cause of the warning returns to normal and the warning stops in the Remote Unit, the Warning Monitoring Function for that unit will be enabled.

Erasing the Warning Judgement Icon

Once the Warning Judgement Icon appears in the display, it will remain on even after the warning stops in the Remote Unit. If you wish to erase the icon, stop monitoring by pressing the Operation Dial and reset the monitoring in the [Target] window.

Starting / Stopping Remote Unit Recording



Upon the start of recording, all recorded data stored in the Remote Unit will be deleted.

Wireless Communication: [W LL Record Settings]

Follow the directions below to make settings to Start / Stop Recording for one specified Remote Unit.

- 1. In the Main Menu, open [WL Record Settings].
- **2.** Select [Start Recording] or [Stop Recording] Remote Unit Recording.
- 3. Select the Group and Remote Unit.
- **4.** When you wish to start recording, make settings for the recording start mode and select [Execute] to search for the Remote Units which are available for communication.
- Pressing the Operation Dial during transmission will cancel the operation. Record Settings window for starting recording



1 [Start]

[Programmed]: Recording will begin on the set date and time. [Immediate]: Recording will begin immediately.

② [Interval] and Recording Mode

The current Recording Interval and the icon for the Recording Mode Settings in the Remote Unit will appear here. You cannot change these settings.

3 Programmed Recording Start Time

If you have selected [Programmed], make settings for the recording start time.

④ Current Time

If you wish to start recording in multiple Remote Units at the same time, make settings from the [Remote Unit Settings] Menu in the RTR-500DC Settings Utility. For details, see the Help Menu in the Application.

Optical / Cable Communication: [OP Part Record Settings]

1. Set up the RTR-500DC and the Remote Unit to enable communication.

See page 44 for details.

2. In the Main Menu, open [OP Record Settings] to make necessary settings to start recording.



1 [Start]

[Programmed]: Recording will begin on the set date and time. [Immediate]: Recording will begin immediately.

② [Interval] and Recording Mode

The current Recording Interval and the icon for the Recording Mode Settings in the Remote Unit will appear here. You cannot change these settings.

3 Programmed Recording Start Time

If you have selected [Programmed], make settings for the recording start time.

- ④ Current Time
- **3.** Adjust the arrow to [Execute] and press the Operation Dial to communicate with the Remote Unit.

Registering and Unregistering Remote Units for "Visitor Entry"

[T WL Visitor Entry]

RTR-500DC for WindowsThis function enables you to register a Remote Unit that has already been registered via "RTR-500DC for Windows" to the RTR-500DC directly.

Up to 42 Remote Units can be registered for "Visitor Entry".

- 1. In the Main Menu, open [WL Visitor Entry].
- **2.** Set up the RTR-500DC and the Remote Unit to enable communication, and open [Accept Visitor RU]. Open [Release One] or [Release All] to delete the registration.
- **3.** After registration has been completed, the message [Completed] appears with Serial No. and Unit Name* of the Remote Unit which has been registered for "Visitor Entry".
 - * This shows the Remote Unit Name entered when Remote Unit Registration was carried out.



Registration Error Messages





[Unregistered]

This message appears when communication is carried out between the RTR-500DC and a Data Logger which is in its original factory default settings or has been re-initialized by using the RTR-500DC Settings Utility.

[Duplication] / Remote Unit Name (alternating display)

They will be alternately displayed when communication is carried out with any Remote Unit which has been already registered for "Visitor Entry" or any Remote Unit which has the same Remote Unit Number or the same Group Registration Info.

[Incompatible]


This message appears when communication is carried out between the RTR-500DC and an incompatible Data Logger.

Incompatible

Communication with Remote Units registered for "Visitor Entry"

Remote Units registered for "Visitor Entry" will automatically be registered to as a "Visitor" group. A [Visitor] group carries out communication without Repeater(s).

Communication with Remote Units registered via "RTR-500DC for Windows"

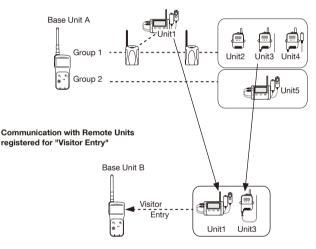

Examples of Usage:

"Base Unit A" monitors all Remote Units.

"Base Unit B" gathers recorded data from the Remote Units in the [Visitor] group.

Communication Errors

If communication fails, one of the following may be the cause.

Wireless Communication Errors may occur:


- When the Base Unit, Remote Unit, or Repeater battery power is low.
- When communication has been carried out between multiple RTR-500DC Units and one Remote Unit.
- When the wireless signal strength is weak.
- When the memory capacity is full (reaching memory capacity in the RTR-500DC)
- While the application is in communication.

Optical / Cable Communication Errors may occur:

- When the Base Unit or Remote Unit battery power is low.
- When the memory capacity is full (reaching memory capacity in the RTR-500DC)
- While the application is in communication.

When the memory capacity is full: [Memory Full]

Please download recorded data from the RTR-500DC to your PC and delete unnecessary data to make space for downloading new data from the Data Logger.



Deleting Selected Data

In the Main Menu, open [Data List] - [Select List] - [Select Delete].

- See page 72 or details.

In "RTR-500DC for Windows", open [RTR-500DC Manager] - [Communication] Menu to download data from the RTR-500DC to your PC and delete the data stored in the RTR-500DC. For details, see the "RTR-500DC Manager" Help.

Deleting All Data in Memory

In the Main Menu, open [Set Functions] - [Clear Memory].

- See page 75 for details.

When the Signal Strength is weak:

Please check the wireless signal strength.

In the Main Menu, open [WL Monitor Mode] - [Specify Remote Unit] to check the antenna shown in the window.

- See page 53-55 (11) for details.

Application related Communication Errors

After having connected an RTR-500DC to a PC and while the application is in communication with the Unit, it may not be possible to carry out communication functions via RTR-500DC operations. Please wait for the application to finish communication or cancel the communication, and carry out operations via the Unit.

Viewing Functions

This section explains the viewing of recorded data in a graph or in a list.

Viewing Data Stored in RTR-500DC64
Viewing a Data List: <list> button / [Data List] 64</list>
List of Data Collected from RTR-574 64
Detailed Information of Data: <list> button / [Data List]65</list>
Viewing the Graph67
Graph Display: <list> button / [Data List] 67</list>
How to Read the Graph 67
Data Range Check and Judgement 69
Viewing Downloaded Data from RTR-574 in a Graph - 70
Data Downloaded via Wireless Communication 70
Data Downloaded via Cable Communication70
Operating the Graph71
Changing the Channel on Display 71
Enlarged View71
Checking the Highest / Lowest Readings71
Deleting Selected Data72
Deleting Selected Data : [Data List] / <list> button 72</list>

Viewing Data Stored in RTR-500DC

Here you can view and check data stored in the RTR-500DC Unit.

Viewing a Data List: <List> button / [Data List]

1. Press the <List> button on the RTR-500DC or open [Data List] in the Main Menu to view the Data List.



1 List No.

This shows the number assigned automatically in the order the data was downloaded.


2 Device Type (Remote Unit)

③ Remote Unit Name

This shows the Remote Unit Name entered when Remote Unit Registration was carried out.

List of Data Collected from RTR-574


Display of the downloaded data from the RTR-574 in the Data List changes depending on the communication method used for the download: Wireless Communication or Cable Communication.



- Data downloaded via Wireless Communication is saved and displayed in two channels : Illuminance and UV Intensity, Temperature and Humidity. ([No.8] and [No.9])
- Data downloaded via Cable Communication is saved and displayed as one set of data for all four channels. ([No.6])

Detailed Information of Data: <List> button / [Data List]

- 1. Press the <List> button on the RTR-500DC or open [Data List] in the Main Menu to view the Data List.
- **2.** Select data from the list and press the <List> button to open the detailed info window.
- **3.** By moving the Operation Dial up and down and selecting different data, it is possible to view the detailed info of all data in numerical order in the list.



For RTR-574

Start

(5)-

EX: Data including Illuminance and UV Intensity

Latest : Jan. 02710 02:13:40



: Dec. 21'09 23:35:40

- 1 Device Type (Remote Unit)
- ② Recording Interval and Mode

This shows the Recording Interval and Mode set in the Remote Unit. Example: 25I→I = 2-second interval, One Time Mode 30McΩ = 30-minute interval. Endless Mode


- 3 Number of Recorded Data
- ④ [Collect]: Data Collection Date / Time

This shows the date and time when data was downloaded into RTR-500DC.

- (5) [Start]: Recording Start Date / Time This shows the date and time when recording was started in the Remote Unit.
- 6 [Latest]: Date / Time of Latest Data

This shows the date and time that of the last recording.

EX: RTR-505-Pt



⑦ Cumulative Values

For Illuminance and UV Intensity data from RTR-574, cumulative measurements can also be viewed.

8 [NAME]: Remote Unit Name

This shows the Remote Unit Name entered when Remote Unit Registration was carried out.

9 [GROUP]: Group Name

When downloading data from the Remote Unit which has not been registered in the RTR-500DC, the group name will appear as "-----".

10 [Sensor]: Type of Connected Sensor

When using an RTR-505-TC (Thermocouple) or an RTR-505-Pt (Pt100, Pt1000), this shows the sensor type being connected to the Remote Unit.


Viewing the Graph

Graph Display: <List> button / [Data List]

- 1. Press the <List> button on the RTR-500DC or open [Data List] in the Main Menu to view the Data List.
- **2.** Select data from the list and click [Graph Display] to view the data in graph form.
- Press the Operation Dial to cancel the Graph Display.

How to Read the Graph

A graph is displayed for each channel of data.

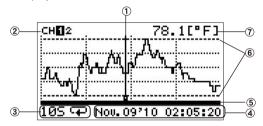

1 Cursor Line (blinking)

By moving the Operation Dial, you can scroll the cursor line left and right.

② Channels for Display

If there are multiple channels of recorded data, you can change the channel on display by holding in the Operation Dial (for about one second).

3 Recording Interval and Mode

The "Recording Interval" and "Recording Mode" for the displayed data are shown here.

Example: 25i→i = 2-second interval, One Time Mode

30Mcp = 30-minute interval, Endless Mode

④ Date and Time of Cursor Position

The date and time of the current cursor position are shown here.

⑤ Graph Display Range

When a portion of the graph has been zoomed-in on, this line shows the range of data currently on display from the entire range of recorded data.

6 Upper Limit / Lower Limit

If Upper and/or Lower Limits have been set in the Remote Units, these limits will be shown using thick dotted lines.


⑦ Measurement at Cursor Position

The corresponding measurement value is displayed for the date and time where the cursor is positioned. Temperature: °C , °F Humidity: %RH Illuminance: Ix, klx UV Intensity : mW/cm² Voltage : V 4-20mA : mA Pulse : Pulset(Rising), Pulse4(Falling)

Data Range Check and Judgement

The RTR-500DC will check if data has exceeded a set Upper or Lower Limit, and the judgement result will be displayed at the top left for the first 5 seconds after opening the graph.

Display Example of Judgement Results



Icons for the Judgement Results

Starting from [CH1], the results will be displayed in rotation.


	(OK)	No measurements were over the set limits.
Ť		One or more measurements exceeded the Upper Limit.
Ŧ		One or more measurements exceeded the Lower Limit.
\$	(Upward and Downward Arrow)	Measurements exceeded both the Upper and Lower Limits.
	(DOT)	Upper and Lower Limit Settings were not made.

Viewing Downloaded Data from RTR-574 in a Graph

Graph Display for the downloaded data from the RTR-574 in the Data List changes depending on the communication method used for the download: Wireless Communication or Cable Communication.


Data Downloaded via Wireless Communication

The downloaded data is saved in two channels: (Illuminance and UV Intensity) and (Temperature and Humidity)

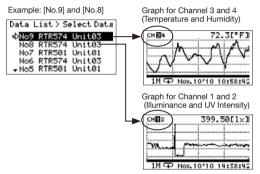

Data Downloaded via Cable Communication


The downloaded data is saved as one set of data containing all four channels.



Operating the Graph

Changing the Channel on Display

By pressing and holding the dial while viewing a graph display, you can change the channel on display.




Enlarged View

Press the <List> button while the entire graph is on display (x1) to zoom in on the image.

Press the <Collect> button while zooming in on one part of data to return to the original whole graph size.

View All


Enlarged View



Graph Display Range (bar)

Checking the Highest / Lowest Readings

With each pressing of the <Collect> button while the entire graph is on display (x1), a cursor line will move to the highest and lowest reading in turn.



Deleting Selected Data

Deleting Selected Data : [Data List] / <List> button

- 1. Press the <List> button on the RTR-500DC or open [Data List] in the Main Menu to view the Data List.
- 2. Select data from the list and click [Select Delete].



- To delete all data stored in the RTR-500DC, in the Main Menu open [Set Functions] - [Clear Memory].

Making RTR-500DC Unit Settings / Others

Operational Settings for RTR-500DC	74
Changing Unit of Temperature	74
Adjusting the Backlight	74
Adjusting Contrast	75
Checking Memory	75
Deleting All Data	75
Making Clock and Time Zone Settings	
via RTR-500DC Operations	76
Figuring Out Your Time Zone	77
Using the RTR-500DC in Areas that	
Observe Daylight Savings Time	77
Setting the Buzzer OFF	78
Checking Battery Status of the RTR-500DC	
Monitoring Radio Waves	79
Uninstalling the Software	80
Menu List	82
[₩ WL Gather Data]	82
F WL Monitor Mode]	
[TRUE Record Settings]	
[Ψ WL Visitor Entry]	84
[OP - Gather Data]	84
[OP - Record Settings]	84
[Data List]	85
[Set Functions]	85
FAQ	86
Q&A about RTR-500DC	86
Q&A about Settings	87
Q&A about Operations after Settings	89
Specifications	92
Software (RTR-500DC for Windows)	93
Options	
Data Collector RTR-500DC WarrantyO	

Operational Settings for RTR-500DC

Operational settings can be made from [Set Functions] in the Main Menu.

Changing Unit of Temperature

- 1. In the Main Menu, open [Set Functions] [Set Temp Unit].
- 2. Select the desired unit of temperature (°C or °F).

Set Func > Temp Unit]
[Back] F	Current Setting
€∕°E	

Adjusting the Backlight

- 1. In the Main Menu, open [Set Functions] [Set Backlight].
- 2. Change the value by moving the dial up and down. Setting Values: 1 to 100, [OFF] (Factory Default Setting: 80)




If the Unit is not used for more than five seconds, the LCD Backlight will automatically turn off to save battery power.

Once operation is re-started, it will automatically turn back ON.

When the Unit is connected to an AC adaptor, the Backlight remains ON.


Adjusting Contrast

- 1. In the Main Menu, open [Set Functions] [Set Contrast].
- **2.** Change the value by moving the dial up and down. Setting Values: 0 to 100 (Factory Default Setting: 65)




Checking Memory

- 1. In the Main Menu, open [Set Functions] [Check Memory].
- Here you can view your current memory usage and the number of readings stored in the Unit.



Deleting All Data

1. In the Main Menu, open [Set Functions] - [Clear Memory], and select [Execute].



Making Clock and Time Zone Settings via RTR-500DC Operations



Clock and Time Zone settings can also be made from the "RTR-500DC Settings Utility".

When making settings via the "RTR-500DC Settings Utility", it is not necessary to carry out operations from the RTR-500DC Unit.

1. In the Main Menu, open [Set Functions] - [Set Clock].

2. Set the desired values for clock and time zone.

Set Func > Set Clock [Back] Jen /08/'10 02:14:45 Time Zone GMT+00:00

- Moving the Operation Dial up and down will change the selection item of the display in the order of month, day, year, hour, minute, second, and [Time Zone] (time difference from GMT).
- ② By pressing the dial, the value for that item will flash.
- (3) Change the value by moving the dial up and down.
- ④ Press the dial again to set the selected value and move to the next settings item.
- **3.** After having completed the clock and time zone settings, move the arrow to [Back] and press the dial to return to the Main Menu.

Figuring Out Your Time Zone

Right click on the clock in the task bar of your computer, and select [Adjust Date/Time].

For Windows XP



For Windows Vista/ 7



Set the displayed time zone into the RTR-500DC.

- Please note that depending on your Windows OS, the time zone may be displayed in UTC format instead of GMT.

Using the RTR-500DC in Areas that Observe Daylight Savings Time

When daylight savings time begins, move the clock settings in the Unit one hour ahead and add one hour to the time zone.

EX1: When the clock is 12:00 and the time zone is GMT+07:00: Change the clock to 13:00 and the time zone to GMT +08:00.

EX2: When the clock is 9:00 and the time zone is GMT - 08:00: Change the clock to 10:00 and the time zone to GMT - 07:00.

When daylight savings time ends, set them back to the original values.

Setting the Buzzer OFF

By setting to OFF the beep, the warning buzzer will not go off even if the RTR-500DC receives information of a Remote Unit Warning during a monitoring session.

- 1. In the Main Menu, open [Set Functions] [Beep].
- 2. Select [ON] or [OFF].

Set Func > Beep	
< <mark>€Back] OFF1</mark> ON	 Current Setting
OFF1(Key Click) OFF2(All)	


OFF1 (Key Click): Turns off sound for button operation. Warning buzzer will still beep.

OFF2 (All): Turns off all beeps including the warning buzzer.

Checking Battery Status of the RTR-500DC

A battery life warning mark, which indicates that battery replacement is needed, will appear when battery voltage depletes to about 2.30V. Here you can check the detailed battery status such as the battery voltage (numerical value) and the battery level.

1. In the Main Menu, open [Set Functions] - [Battery Voltage].

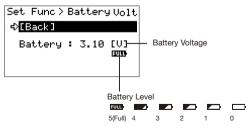


Monitoring Radio Waves

It is not possible to use the [Radio Wave Monitor] function in the RTR-500DC while carrying out communication from the software application.

There may be some instances in which, due to other wireless communication devices using radio waves or other radio wave interferences, communication capability of RTR-500DC does not meet expected standards. Monitoring radio waves with the RTR-500DC Unit before carrying out Remote Unit registration via

"RTR-500DC for Windows" will help you set a frequency channel to avoid interference and reduce the chances of communication errors.

- 1. In the Main Menu, open [Set Functions] [Radio Wave Monitor].
- **2.** The Unit will search for radio waves and display wireless signal levels.
- Press the Operation Dial to cancel the radio wave monitoring function.
- Until the function is canceled, wireless communication will still be in progress for the RTR-500DC.
- While using this function, the Auto Power Off Function will be disabled.



Vertical Axis: Wireless Signal Level (1 to 5) Horizontal Axis: Frequency Channel (0 to 21 CH)

White Bar: Maximum Value of Radio Waves the Unit has Received

Black Bar: Current Value of Radio Waves*

* Due to background noise, the channels for which communication has not taken place will display about Level 1 of wireless signal in graph.

Assigning a Communication Frequency Channel

When assigning a frequency channel for a Group in the Remote Unit Registration, select a channel with a short white/black bar. A longer white/black bar shows stronger signal strength which indicates the presence of other wireless communication devices.

Uninstalling the Software

Before running the uninstall program, make sure to guit all software applications.

If it is necessary to uninstall the software please follow the steps below:

- 1. In the Windows Start Menu, click on "Control Panel" to open.
 - For Windows XP



Click the "Add or Remove Programs".

For Windows Vista / Windows 7



Click the "Programs - Uninstall a Program".

2. All currently installed programs will appear in a list.

3. From the list of currently installed programs, select "RTR-500DC for Windows" and click the [Remove] Button or the [Uninstall] Button.

And to Be	merve Programs			
题	Conetty intelledgesgreen.	E Perseguini	petter News	H
Garge in Report Integrated	an source to weak-weight Odyme in accord therein.		Ren Identifie	12.000
	farming the programmer mapping, the barrow		int stor of t	Batars.
Alline				-
ij.				

For Windows XP

For Windows Vista / Windows 7

Click the [Remove] Button

Click the [Uninstall] Button

4. The "Install Shield Wizard" window will appear.


Uninstall or change a program



- ① Place a check next to [Remove],
- 2 and click the [Next] button.


- **5.** The uninstall process will begin. Follow the directions as they appear.
- 6. After uninstall has been completed, please click the [Finish] button.

Menu List

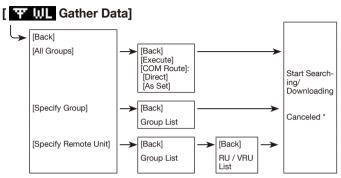


- * Move the arrow to [Cancel] and press the Operation Dial to cancel the operation during a download session by Group.
- * While a download session with a Remote Unit is in progress, press the Operation Dial to cancel communication with that Remote Unit.


T IIL Monitor Mode]



* It is possible to cancel by pushing the Operation Dial while Searching.

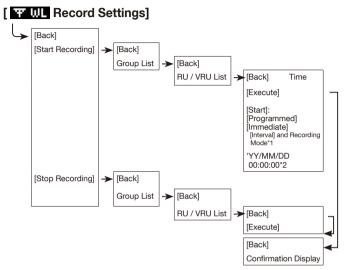


- * 1: For Confirmation Only.
- * 2: For Programmed Start.

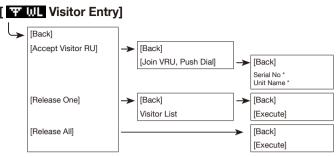

* For Confirmation Only.


[OP Gather Data]

Specify the period of data to be downloaded. Upon completion of the download, a graph will appear.




- * 1: For Confirmation Only.
- * 2: For Programmed Start.

[Data List]



[Set Functions]

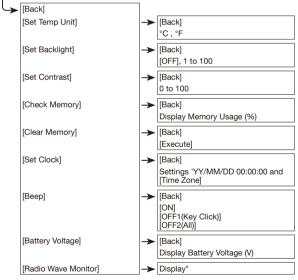

* It is possible to cancel by pushing the Operation Dial.

FAQ

Q&A about RTR-500DC

Q1: Can this be used in any country in the world?

A: The RTR-500DC has been designed to comply with FCC (USA) and IC (Canada) regulations and should not be used in any countries other than those in which either of these regulations are the standard.

Q2: I want to use the RTR-500DC outdoors; is the unit waterproof, moisture proof and dust proof?

A: The unit is not waterproof, moisture proof, or dust proof. When carrying around outdoors or when collecting data outdoors please be careful not to expose unit to water or dust.

Also please follow these precautions:

- Do not handle unit with wet hands.
- Do not replace batteries with wet hands.
- When using optical communication and the Remote Unit is wet, please make sure to dry it off before trying to use optical communication.

Q3: How can I return the RTR-500DC back to its original factory default settings?

A: Connect the target RTR-500DC to your PC with a USB cable. In the Settings Utility Menu, select [Return Base Unit to Factory Default Settings] and the settings will be returned to the default factory ones.

Q&A about Settings

Q1: The computer does not seem to recognize the USB connected RTR-500DC, why not?

A: Please check the following:

Check the RTR-500DC

- Check the USB connection between the computer and the RTR-500DC.

Check your Computer

- Make sure that the software has been installed properly and is working.
- Use your computer's Device Manager to check whether or not the USB device driver has been installed properly. (See page 31 for details)
- Connect a different USB device (mouse, digital camera, etc...) other than an RTR-500DC unit to your PC and see if it operates properly.
- If your PC has more than one USB Port, try connecting the USB cable to a different port.
- If you have access to another computer, try seeing if communication works with the other computer.
- Check to make sure that not more than one Base Unit is connected to the PC.
- If there are more than one connected at the same time, the connected units cannot be recognized.

If after checking and trying the above there is no improvement please contact the dealer where the product was purchased.

Q2: The Remote Unit is not recognized by my computer, what is the problem?

A: Please check the following:

For RTR-501 / 502 / 503 / 505

- Make sure that the RTR-500DC is recognized by your PC.
- Check the USB connection between the computer and the RTR-500DC.
- Make sure the optical communication areas are aligned properly.
- Make sure that the slitted areas are aligned properly.
- Make sure that there is sufficient battery power in the target Remote Unit.
- The remaining battery power can be checked on the display of the Remote Unit.
- When it is time for the battery to be replaced, the [BAT] mark will appear.
- The Remote Unit battery level can also be checked by using the "Monitoring" function in the RTR-500DC. (See page from 51 for details)

A: For RTR-574, RTR-500

- Check the USB connection between the computer and the device.
- Make sure that the software which came with the device has been installed properly and is working.
- Use your computer's Device Manager to check whether or not the USB device driver has been installed properly. (See page 31 for details)
- Connect a different USB device (mouse, digital camera, etc...) to your PC and see if it operates properly.
- If your PC has more than one USB Port, try connecting the USB cable to a different port.
- If you have access to another computer, try seeing if communication works with the other computer.
- Check to make sure that not more than one device is connected at the same time. If there are more than one connected at the same time, the connected units cannot be recognized.

If after checking and trying the above there is no improvement please contact the dealer where the product was purchased.

Q3: The software application does not start, why not?

A: It is not possible to carry out communication from the software application while using the RTR-500DC communication functions (such as the [Monitor Mode] or the [Radio Wave Monitor]). Make sure to quit the communication functions in progress before using the application.

Q&A about Operations after Settings

Q1: Communication errors occur frequently, why and what can I do?

A: If Wireless Communication Errors are occurring:

Take the RTR-500DC and carry it to a spot where communication is possible. In addition please check or try the following items.

- Try placing new batteries in the Base Unit, Remote Unit and or Repeater.
- Make sure that not more than one is trying to communicate at the same time; this will cause communication errors.
- The radio signal strength may be weak.
- The communication errors may be caused by insufficient memory in the RTR-500DC. (Memory FULL)
- While the application is in communication.

If Optical or Cable Communication Errors are occurring:

- Please check the following, wait and try communication again.
- Try placing new batteries in the Base Unit and Remote Unit.
- The communication errors may be caused by insufficient memory in the RTR-500DC.(Memory FULL)
- While the application is in communication.

Q2: Is it possible to adjust or alter recorded data that has been downloaded by the RTR-500?

A: In order to maintain the integrity and trustworthiness of the recorded data, the software has been designed to not allow modifications to be carried out on actual recorded data. If it is necessary to edit recorded data, in the Temperature / Humidity Graph or the Multi-scale Graph save the data to text file and use a common spreadsheet software such as Excel to edit the text file data.

Q3: Can I merge all the RTR-574 data that has been downloaded via wireless communication into one set of data?

A: Although the data is split into two parts: Illuminance / UV Intensity (Channels 1 and 2) and Temperature / Humidity (Channels 3 and 4), it is possible to display and save the data as one set of data.

This can be done in either of the following two ways:

Opening from the Multi-scale Graph

In the Multi-Scale Graph, in the [File] menu click on [Open] and select the downloaded data file you wish to open.

Opening from the RTR-500DC Manager

- 1. Connect a RTR-500DC via USB to your PC and open the RTR-500DC Manager.
- From the Data Info List, select the set(s) of RTR-574 data you wish to save to your PC by using the <Shift> key or the <Ctrl> key.
- In the [Communication] Menu, click on [Download Data] to save the recorded data to the PC.
- After selecting data in the Data Info List, right click to open a context menu from which you can select [View Graph]. The [Save as...] window will appear.
- After assigning a name and saving the data, the Multi-scale Graph will open where you can view the Graph for the selected data.

Q4: When registering the Remote Unit I made settings for "Scale Conversion", but in the Remote Unit and Data Collector scale conversion is not being carried out. Why?

A: The measurement values and graphs displayed on Remote Unit's and Data Collector's LCD will not be converted, and therefore the measurement before scale conversion will appear. However, the downloaded data has the info for the scale conversion settings which you have made, and you can view the converted measurements in graph form by using "RTR-500DC Manager" to download data to a PC and "Multi-Scale Graph" to open the downloaded data.

The following Remote Units can use "Scale Conversion":

RTR-505-V (Voltage) RTR-505-mA (4-20mA)

RTR-505-P (Pulse)

* What is "Scale Conversion"?

Make settings here to view the downloaded data in the desired unit. For details, see [Remote Unit Registration] in the "RTR-500DC Settings Utility" or "Multi-Scale Graph" application's Help in

"RTR-500DC Settings Utility" or "Multi-Scale Graph" application's Help in the [Tool] menu.

Specifications

Data Collector RTR-500DC Unit	
Compatible Devices	Remote Unit: RTR-501 / 502 / 503 / 574 / 505-TC / 505-Pt / 505-V / 505-mA / 505-P, RTR-501L / 502L / 503L / 505-TCL / 505-PtL / 505-VL / 505- mAL / 505-PL Repeater: RTR-500
Storage Capacity	When downloading units at full logging capacity: 15 units of RTR-501, 502, 503 and/or 505 7 units of RTR-574 When downloading units at non-full logging capacity, it can store and manage up to 250 downloading sessions. - Varies depending upon the device type, number of channels, type of recorded data.
Internal Clock Accuracy	At \pm 30 seconds/month and 25°C
LCD Display	FSTN 1.9 inch, 128 x 64 dot, semi-transmissive, monochrome, amber colored LED backlight
Functions: Wireless Communication	Downloading and Saving Recorded Data, Monitoring Current Readings and Remote Unit Status (Warning Monitoring), Starting and Stopping Remote Unit Recording, Checking Signal Strength for Communication with Remote Unit
Functions: Non- WirelessCommunication	Downloading and Saving Recorded Data Starting and Stopping Remote Unit Recording
Functions: RTR-500DC Operations	Changing Unit of Temperature, LCD Backlight, LCD Contrast, Checking Memory, Button Sound, Checking Battery Power, Auto Power Off Function (if the Unit is not used for three minutes)
Display Items	Graph (Highest / Lowest Measurement, Upper / Lower Limit Settings) Data Details (Downloading Date/Time, Recording Start Date/Time, Recording Stop Date/Time, Last Recording Date/Time)
Types of Warning Monitoring	Upper Limit / Lower Limit Exceeded Upper Limit / Lower Limit Exceeded for Cumulative Illuminance and Cumulative Amount of UV Light (RTR-574)
Power	AAA Alkaline Battery x 2 - AAA NI-MH batteries, AC adaptor (option AD-0638), or USB bus power may also be used.
Battery Life	Expected battery life for 2 AAA alkaline batteries: Monitoring: 96 hours of continued use For communication without Repeater(s) at 60 seconds interval Checking Signal Strength: 32 hours of continued use Downloading Data: 730 consecutive sessions Via wireless communication (When downloading RTR-501 at full storage capacity / without Repeater(s) / LCD backlight Off) - Battery life varies depending upon the type of battery, the measuring environment, the frequency of communication, and the ambient temperature in which it is used.
Data Backup	About 1 month (Saved data will be erased if all battery power is lost.)

Communication Interfaces:	With PC: USB Communication: 38,400bps With Remote Unit: Wireless Communication Optical Communication: 2,400bps (Remote Units excluding RTR- 574) Cable Communication: 19,200bps (RTR-574)
Communication Time (excluding Wireless Communication)	About 1 month (Saved data will be erased if all battery power is lost.) When downloading one Remote Unit at full logging capacity: - From RTR-500DC to PC USB Communication: 12 seconds (1Ch) / 24 seconds (4Ch) -From Remote Unit to RTR-500DC Optical Communication: about 170 seconds (Remote Units excluding RTR-574) Cable Communication: about 45 seconds (RTR-574)
Dimensions	H125mm x W58mm x D26.3mm (excluding protrusions) Antenna Length: 109mm
Weight	About 127g (including 2 AAA batteries)
Operating Environment	Temperature: 0 to 50°C / Humidity: 90%RH or less (no condensation)
Others	Not waterproof, moisture proof, or dust proof

Wireless Communication Specifications

RF Power	7mW
Radio Standard Specifications	FCC Part15 Section247 / IC RSS-210 Frequency Range : 902 to 928MHz
Transmission Range	About 150 meters (500 ft) if unobstructed and direct
Communication Time	When downloading a Remote Unit at full logging capacity: About 120 seconds" (Remote Units excluding RTR-574) About 240 seconds" (RTR-574) *The same amount of time should be added for each Repeater.

Software (RTR-500DC for Windows)

Operating Environment

Compatible Devices	Base Unit: RTR-500DC Remote Unit: RTR-501 / 502 / 503 / 574 / 505-TC / 505-Pt / 505-V / 505- mA / 505-P, RTR-501 / 502 / 503L / 505-TCL / 505-PtL / 505-VL / 505- mAL / 505-PL Repeater: RTR-500
Compatible OS	Microsoft Windows 7 32 / 64bit English, Spanish Microsoft Windows Vista 32bit English, Spanish Microsoft Windows XP 32bit (SP2 or above) English, Spanish
Memory Capacity	A Stable Windows Operating Environment
Disc Capacity	More than 30 MB of free space (More free space is necessary for data)
Monitor	SVGA (800 x 600) more than 256 colors

Options

Communication Cable

TR-6C10: RS-232C Communication Cable


Cable Length: 1.0m (40 in) For communication between RTR-500DC and RTR-574



AC Adaptor

AD-0638

Input : AC100-240V Output : DC6V 500mA Frequency : 50/60Hz Cable Length: 1.85m (74 in) Plug Type: A



For product information or questions contact us at: T&D Corporation

817-1 Shimadachi, Matsumoto, Nagano 390-0852, JAPAN Fax: +81-263-40-3152 E-mail: support@tandd.com

Website

http://www.tandd.com/

We have opened an English Website for your convenience. Here you can find information about our company, news, products, upcoming events, software and Introductory Manual downloads, as well as, other support. Please stop by and see what we have to offer.

Data Collector RTR-500DC Introductory Manual

Published by T&D Corporation © Copyright T&D Corporation. All rights reserved.

This is printed on recycled paper.

A Provisions for Free Repair

The warranty is contained in the User's Manual (English) included in the package. When seeking repair, please make sure to fill in all required fields and present it.

- If the Unit does not work properly despite the fact that the customer used it properly and in line with the manual, the Unit shall be repaired free of charge through the distributor which sold the Unit.
- If the customer requests free repair because of trouble within the warranty period, bring or send the Unit along with the warranty to the distributor.
- If you have moved after purchasing, or there are difficulties contacting the distributor from which you purchased the Unit, please contact T&D directly for service.
- 4. Free repair is not available in the following cases even though it is within the warranty period:
 - 1. Trouble or damage was caused by careless operation, natural disaster, fire, public pollution, or use of a power source other than specified.
 - If repair, adjustment, disassembly or modification of the Unit has been carried out by a person other than a T&D authorized engineer.
 - Trouble or damage was caused by transportation, movement or dropping of the Unit afterpurchase.
 - 4. Failure to submit the Warranty or failure to fill in all items required in the Warranty.
- 5. The Warranty cannot be reissued.

The Warranty only promises customers free repair within the period and conditions clarified in The Warranty. Therefore, the customer's legal rights will not be limited by the Warranty. For further information on repair and other service questions after the termination of the warranty period, contact your distributor.